


# Coolant

- Remove the clips.
- Remove the left radiator grill cover (5) by releasing the tab A (6), tab B (7), tab C (8), hook A (9) and hook B (10).

## LEFT FRONT

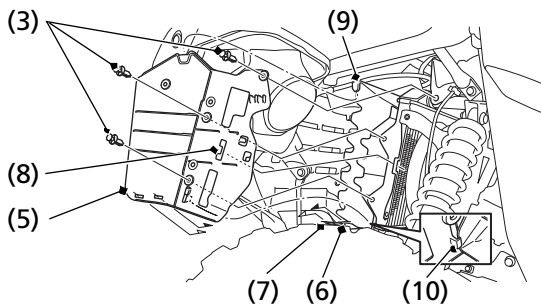

(3) clips

(5) left radiator grill cover

(6) tab A

(7) tab B

(8) tab C

(9) hook A

(10) hook B

(cont'd)