

Maintenance Schedule

ITEM		FREQUENCY	NOTE	ODOMETER READING (Note 1)								Refer to page
				× 1,000 mi	0.6	4	8	12	16	20	24	
				× 100 km	10	64	128	192	256	320	384	
EMISSIONS-RELATED ITEMS	*	FUEL LINE					I		I		I	—
	*	THROTTLE OPERATION					I		I		I	—
		AIR CLEANER	2					R			R	100
		CRANKCASE BREATHER	3			C	C	C	C	C	C	102
		SPARK PLUGS				I	R	I	R	I	R	112
	*	VALVE CLEARANCE			I		I		I		I	—
		ENGINE OIL			INITIAL=600 mi (1,000 km) or 1 month: R REGULAR=EVERY 8,000 mi (12,800 km) or 12 months: R							86
		ENGINE OIL FILTER			R		R		R		R	91
	*	ENGINE IDLE SPEED			I	I	I	I	I	I	I	—
		RADIATOR COOLANT	5				I		I		R	95
	*	COOLING SYSTEM					I		I		I	—
	*	SECONDARY AIR SUPPLY SYSTEM					I		I		I	—
*	EVAPORATIVE EMISSION CONTROL SYSTEM	4					I			I	—	

* Should be serviced by your Honda dealer, unless you have the proper tools and service data and are mechanically qualified. Refer to the official Honda Service Manual (page 212).