


## Replacement

1. Remove the bolts (1), washers (2) and air cleaner housing cover (3).
2. Remove the air cleaner (4).
3. Discard the air cleaner.  
Thoroughly clean the inside of the air cleaner case (5).
4. Install a new air cleaner and reinstall the air cleaner housing cover.
5. Reinstall the washers and make sure the bolts are tightened securely to the specified torque:  
1.1 lbf·ft (1.5 N·m , 0.2 kgf·m)

### RIGHT SIDE

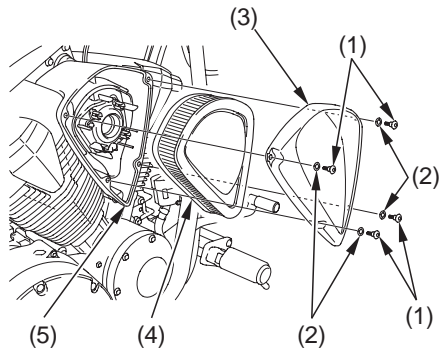

- |                               |                      |
|-------------------------------|----------------------|
| (1) bolts                     | (4) air cleaner      |
| (2) washers                   | (5) air cleaner case |
| (3) air cleaner housing cover |                      |