


Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. To move the headlight case, loosen the bolts and nuts. Tighten the bolts after adjustment.

Torque: 7 lbf·ft (10 N·m, 1.0 kgf·m).

Obey local laws and regulations.

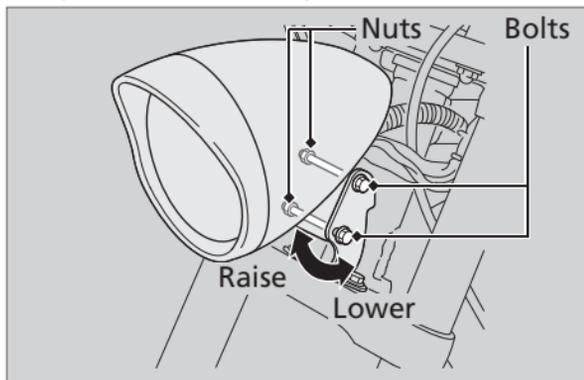

Adjusting the Brake Light Switch

Check the operation of the brake light switch. Turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

