

# Troubleshooting

<b>Engine Will Not Start</b> .....	P. 78	<b>Electrical Trouble</b> .....	P. 90
<b>Overheating (High coolant temperature indicator is on)</b> .....	P. 79	Battery Goes Dead .....	P. 90
<b>Warning Indicators On or Flashing</b> .....	P. 80	Burned-out Light Bulb .....	P. 90
Low Oil Pressure Indicator .....	P. 80	Blown Fuse.....	P. 94
PGM-FI (Programmed Fuel Injection)			
Malfunction Indicator Lamp (MIL).....	P. 80		
ABS (Anti-lock Brake System) Indicator			
(VT1300CXA only) .....	P. 81		
<b>Tire Puncture</b> .....	P. 82		
Emergency Repair Using a Tire Repair Kit ..	P. 82		
Removing Wheels .....	P. 82		