

6. Install the rear axle nut and washer.
Tighten the rear axle nut.

Torque: 94 lbf·ft (127 N·m, 13.0 kgf·m).

7. Install the axle holding bolt and washer.
Tighten the axle holding bolt.

Torque: 20 lbf·ft (27 N·m, 2.8 kgf·m).

8. After installing the wheel, apply the brake pedal several times, then check if the wheel rotates freely. Recheck the wheel if the brake drags or if the wheel does not rotate freely.

9. Install the muffler, muffler bracket bolt A, B, nuts and washer.
Tighten the muffler bracket bolt A, B, nuts and exhaust pipe joint nuts.

Exhaust pipe joint nut:

Torque: 17 lbf·ft (23 N·m, 2.3 kgf·m).

Muffler bracket bolt A, B and nuts:

Torque: 20 lbf·ft (27 N·m, 2.8 kgf·m).

If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.