

Changing Air Cleaner Element

Use a new Honda Genuine air cleaner element or an equivalent specified for your motorcycle.

NOTICE

Using the wrong air cleaner element may cause premature engine wear or performance problems.

1. Remove the left side cover. ➤ [P.48](#)
2. Remove the air cleaner element by releasing the set spring.
3. Install the new air cleaner element.
 - ▶ Make sure the air cleaner element is installed securely.
4. Install the left side cover.

