

AIR CLEANER HOUSING

REMOVAL

NOTE:

Refer to page 3-5 for air cleaner element replacement.

Remove the following:

- Fuel tank (page 2-4)
- Air cleaner element (page 3-5)
- Battery (page 16-5)

Remove the sub-air cleaner housing clamp mounting screw.

Disconnect the crankcase breather tube from the air cleaner housing.

Disconnect the PAIR (Pulse secondary air injection) air suction tube from the air cleaner housing.

Loosen the carburetor connecting tube band screws.

