


Connect the air suction tube to the PAIR control valve.

Install the PAIR control valve and tighten the three mounting bolts securely.

Connect the following:

- Secondary air tubes
- PAIR control valve vacuum tube

Install the removed parts in the reverse order of removal.

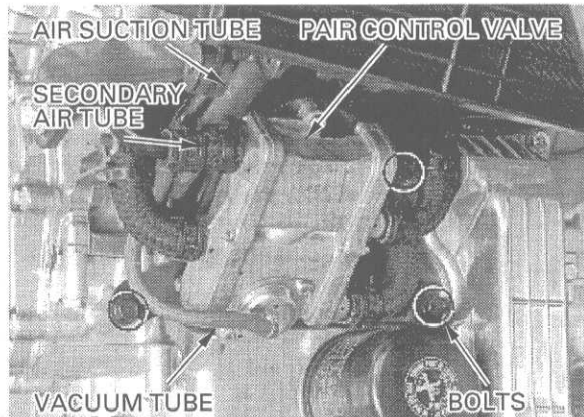

FUEL VALVE

INSPECTION

Remove the fuel tank (page 2-4).

Connect the fuel tube to the fuel valve and place the suitable gasoline container under the fuel tube.


Turn the fuel valve on.

If the fuel comes out of the fuel tube, replace the diaphragm.

Connect a commercially available vacuum pump to the diaphragm vacuum outlet.

Fuel should flow out from the fuel tube when vacuum is applied.


If fuel flow is restricted, replace the diaphragm.

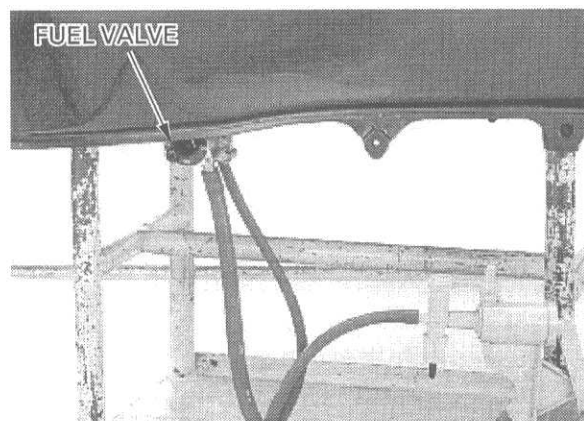

DISASSEMBLY

Drain the fuel from the fuel tank.

Remove the four screws and diaphragm cover.

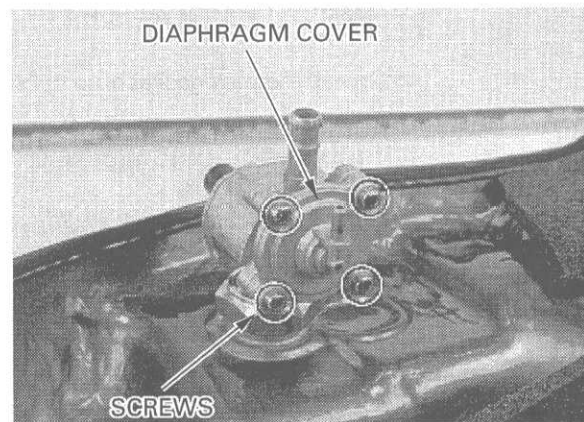

Remove the spring, diaphragm and spacer.

