


## COOLING SYSTEM

Connect the radiator sub-harness 3P (Blue) connector.

Fill the system with recommended coolant (page 6-5).  
Install the fuel tank (page 2-4).

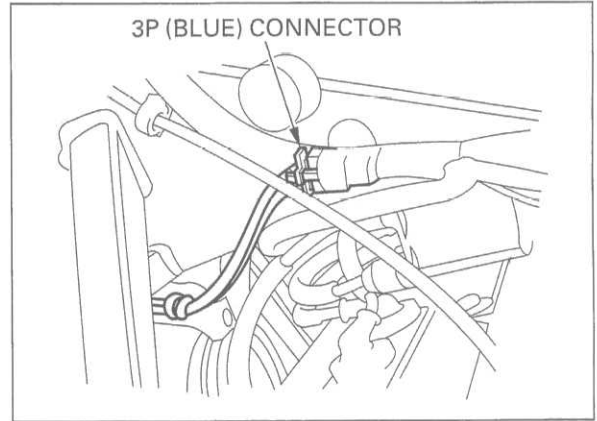


## RADIATOR RESERVE TANK

### REMOVAL/INSTALLATION

Remove the rear fender (page 2-4).

Remove the fuse box.  
Disconnect the siphon tube.  
Remove the bolt and radiator reserve tank.

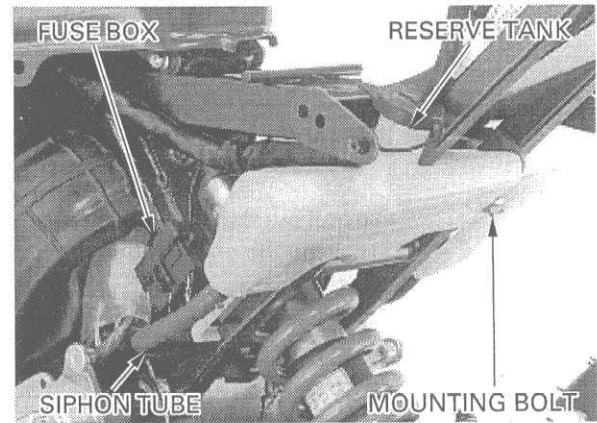

Installation is in the reverse order of removal.

Fill the system with recommended coolant and bleed the air (page 6-5).



## WATER PUMP

### MECHANICAL SEAL INSPECTION

Inspect the inspection hole for signs of coolant leakage.

If there is leakage, the mechanical seal is defective and replace the water pump as an assembly.

