


ENGINE REMOVAL/INSTALLATION


Tighten the front engine hanger nuts to the specified torque.

TORQUE: 54 N·m (5.5 kgf·m , 40 lbf·ft)

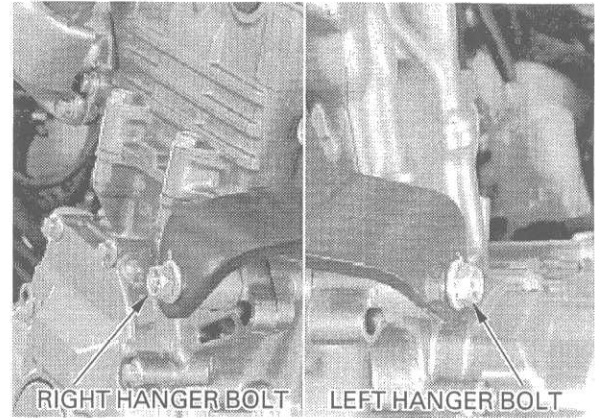

Tighten rear lower engine hanger nut to the specified torque.

TORQUE: 54 N·m (5.5 kgf·m , 40 lbf·ft)

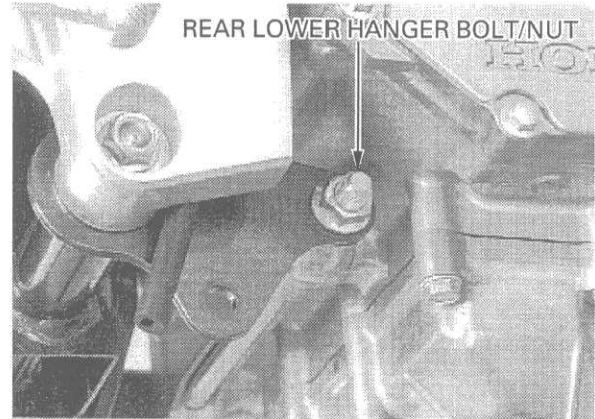

Tighten rear upper engine hanger nut to the specified torque.

TORQUE: 54 N·m (5.5 kgf·m , 40 lbf·ft)



Install the gearshift pedal link aligning its slit with the punch mark on the gearshift spindle. Install and tighten the pinch bolt to the specified torque.

TORQUE: 20 N·m (2.0 kgf·m , 14 lbf·ft)

