


## REAR WHEEL/SUSPENSION

Apply grease to the driven flange and rear wheel hub contact area.

Install the driven flange assembly into the left wheel hub.


DRIVEN FLANGE ASSEMBLY

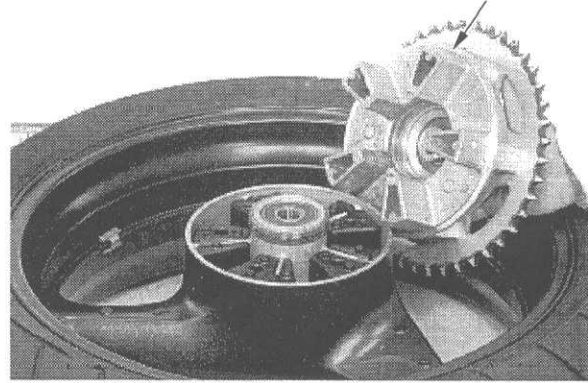

If the driven sprocket was removed, install the driven sprocket and tighten the nuts.

**TORQUE:** 108 N·m (11.0 kgf·m , 80 lbf·ft)

DRIVEN SPROCKET

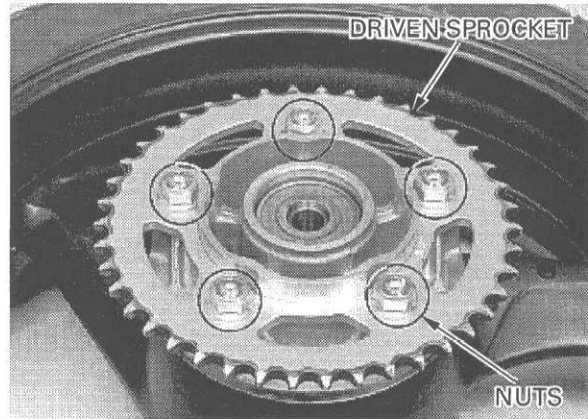

Apply grease to the left dust seal lips, then install it into the driven flange.

GREASE

LEFT DUST SEAL



Install the brake disc with its "DRIVE" mark facing out.

Install and tighten the new bolts to the specified torque.

**TORQUE:** 42 N·m (4.3 kgf·m , 31 lbf·ft)

Apply grease to the dust seal lips, then install it into the right wheel hub.

"DRIVE" MARK

NEW

BOLTS

