


Push the dust seal and piston seal in and lift them out.

CAUTION:

Be careful not to damage the piston sliding surface.

Clean the seal grooves with clean brake fluid.

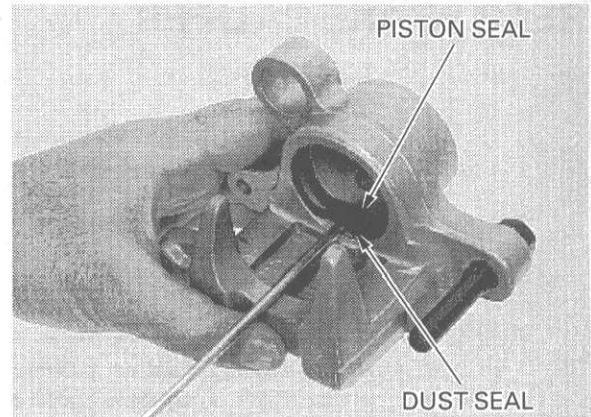

INSPECTION

Check the caliper cylinder for scoring or other damage.


Measure the caliper cylinder I. D.

SERVICE LIMIT: 38.24 mm (1.506 in)

Check the caliper piston for scratches, scoring or other damage.

Measure the caliper piston O. D.

SERVICE LIMIT: 38.09 mm (1.500 in)

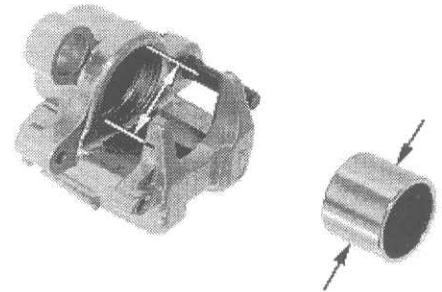

ASSEMBLY

