

# HANDLEBAR SWITCHES

Disconnect the handlebar switch connectors.

Check for continuity between the wire terminals of the handlebar switch connector.

Continuity should exist between the color coded wire terminals as follows:

### ENGINE STOP SWITCH


	IG	BAT2
OFF		
RUN	○	○
COLOR	BI	BI/W

### STARTER SWITCH (Except U type)

	ST	IG
FREE		
PUSH	○	○
COLOR	Y/R	BI/W

### STARTER SWITCH (U type)

	ST	IG	HL	HL1
FREE			○	○
PUSH	○	○		
COLOR	Y/R	BI	BI/R	Bu/W

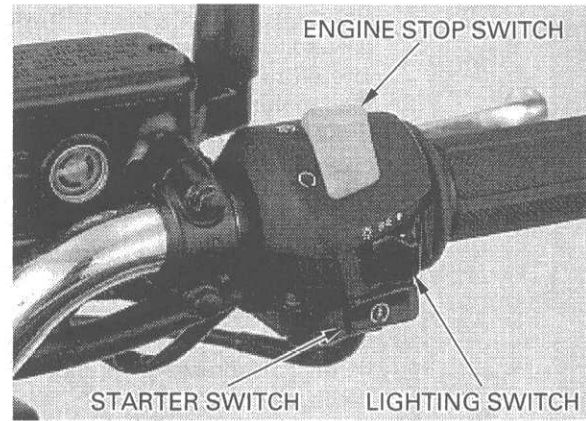

### LIGHTING SWITCH (Except U type)

	BAT3	TL	BAT4	HL
•				
P	○	○		
H	○	○	○	○
COLOR	BI/Br	Br	BI/R	Bu/W •

### TURN SIGNAL SWITCH


	W	R	L
R	○	○	
N			
L	○		○
COLOR	Gr	Sb	O

### PASSING SWITCH

	BAT2	HI
FREE		
PUSH	○	○
COLOR	BI/R	•

### DIMMER SWITCH

	HL	Lo	HI
Lo	○	○	
(N)	○	○	○
Hi	○		○
COLOR	Bu/W •	W	Bu •

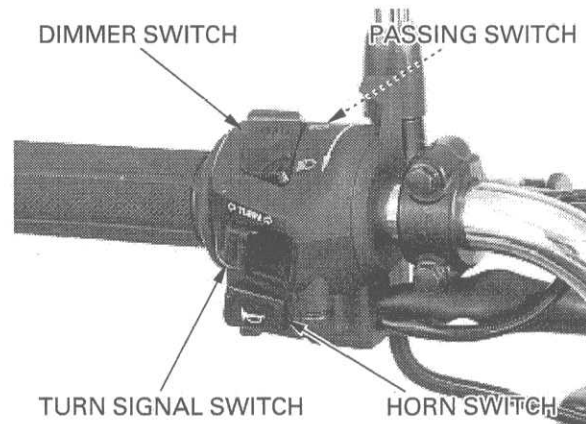

### HORN SWITCH

	Ho	BAT3
FREE		
PUSH	○	○
COLOR	Lg	BI/Br