



## GENERAL INFORMATION

### SYMBOLS

The symbols used throughout this manual show specific service procedures. If supplementary information is required pertaining to these symbols, it would be explained specifically in the text without the use of the symbols.

#### INSTRUCTION SYMBOL

	Removal or Disassembly procedure. Disconnect the connector.		Installation or Assembly procedure. Connect the connector.
	Order of removal/disassembly with a point of note.		Order of installation/assembly with a point of note.
	Tighten specified torque.		Replace with a new one before assembly.
	Check the part for an inspection.		Measure the part for an inspection.
	Turn ignition switch to OFF.		Turn ignition switch to ON.
	Start the engine.		Measure a resistance or check continuity.
	Measure a voltage.		Measure an ampere.
	Use the Honda special tool.		Refer to "Basic" Service Manual for the instruction.

#### LUBRICATION AND SEAL SYMBOL

	Use the recommend engine oil.		Apply molybdenum oil solution (mixture of an engine oil and molybdenum grease in a ration of 1:1).
	Apply a specified grease. Use a multi-purpose grease unless otherwise specified.		Apply a liquid sealant.
	Apply a locking agent. Use a medium strength one unless otherwise specified.		Use DOT 3 or DOT 4 brake fluid.
	Use a specified fork oil or suspension fluid.		