
TRANSMISSION

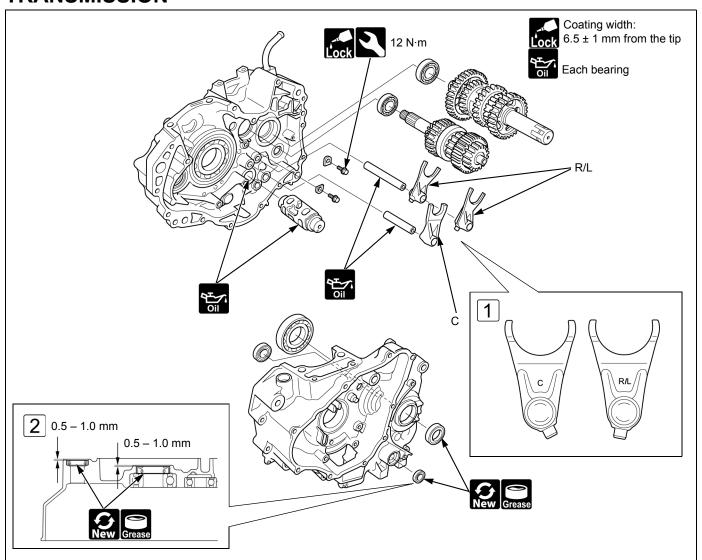



- Separate the crankcase → 2-27
 1 Each shift fork has an identification mark. R/L: right and left

C: center

• 2 Install the oil seal to the left crankcase so that the depth as shown.