


FRAME/BODY PANELS/EXHAUST SYSTEM

Remove the following:

- Exhaust pipe mounting nut
- Footpeg holder mounting bolts and footpeg
- Muffler mounting bolt/nut/collar
- Muffler
- Muffler gasket

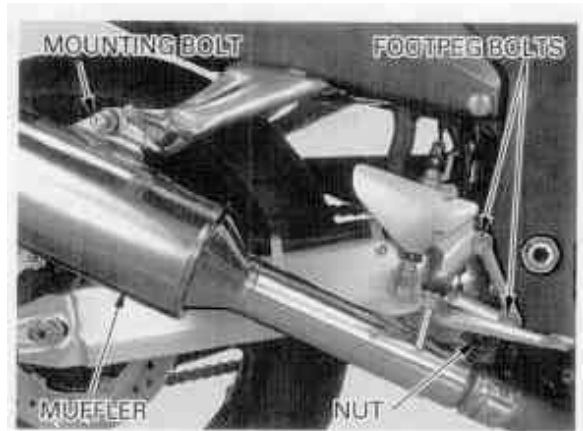

Remove the following:

- Upper cowl cover/inner panel (page 2-5)
- Wind guard (page 2-14)

Remove the oil cooler upper mounting bolts and main wire harness guide.



Disconnect the fan motor sub-harness 2P (Natural) connector.

Remove the radiator upper mounting bolt.



Remove the radiator from the upper and lower brackets by moving it to the left, then move the radiator/oil cooler forward as an assembly.

