


LUBRICATION SYSTEM

Remove the SH bolts and oil cooler pipes and O-rings.

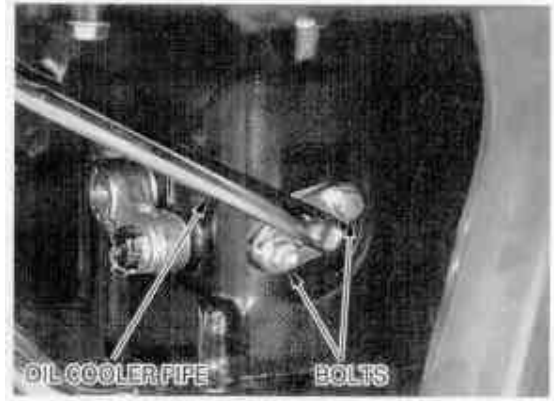


INSPECTION

Check the oil cooler air passage for clogging or damage.

Straighten bent fins with a small, flat blade screwdriver and remove insects, mud or other obstructions with compressed air.

Check for any oil leakage from the oil cooler and hose.

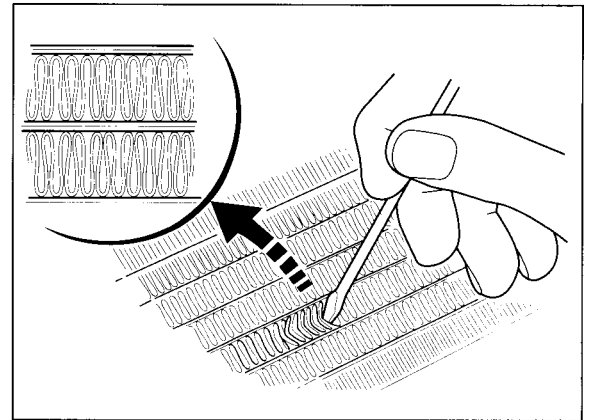

INSTALLATION

