


Measure the voltage between the terminals of the wire harness side.

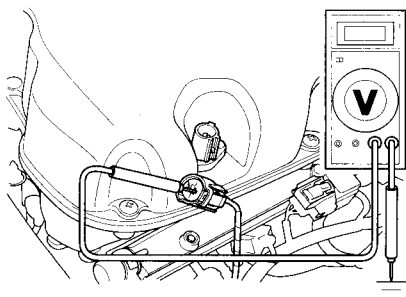

Connection:

Gray/Blue (+) – Ground (-)


Standard: 4.75 – 5.25 V

Out of range

- Open or short circuit in Gray/Blue wire
- Loose or poor contact on the ECM connectors

Voltage exists

Measure the voltage between the terminals of the wire harness side.

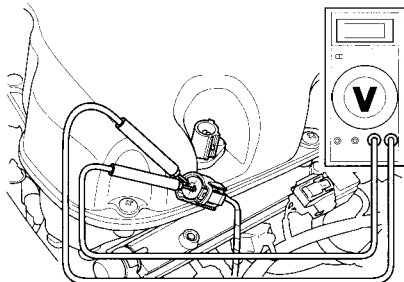

Connection:

Gray/Blue (+) – Green/Orange (-)

Standard: 4.75 – 5.25 V

Out of range

- Open or short circuit in Green/Orange wire
- Loose or poor contact on the ECM connectors

Voltage exists

- Replace the ECM with a new one, and inspect it again