

Disconnect the fuel tube sealing nut and sealing washers.

Temporarily install the 12 × 30 mm bolt (pitch 1.75) and sealing washers to the fuel tube banjo, then tighten the sealing nut.



Disconnect the fuel return tube at the throttle body.



Pull the fuel tank backward and release the front bracket from the frame.



Place the fuel tank upside down.

CAUTION:

Be careful not to damage the fuel tank.

Disconnect the fuel return tube from the fuel pump. Remove the fuel tube banjo bolt and sealing washers, then remove the fuel tube from the fuel pump.

Refer to page 19-17 for fuel level sensor removal.
Refer to page 5-50 for fuel pump removal.

