



The No. 3 starter valve cannot be adjusted, it is the base starter valve.

Adjust each intake vacuum pressure with the No. 3 cylinder.

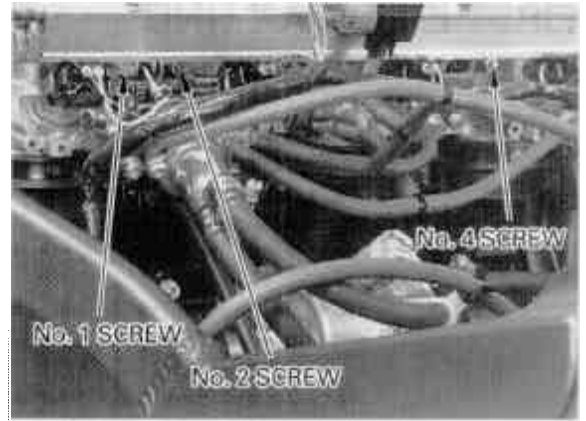

Remove the plugs and connect the PAIR air suction hoses to the reed valve covers.

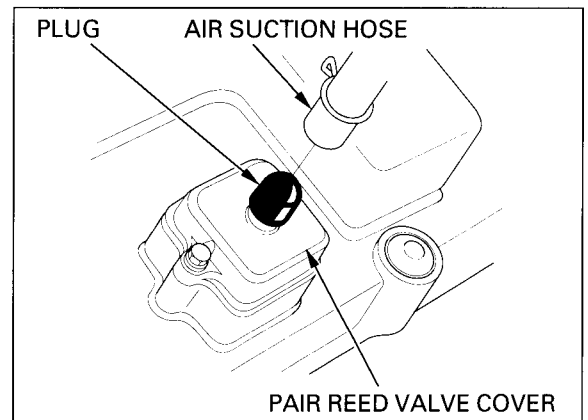

Adjust the idle speed if the idle speed differs from the specified speed.

IDLE SPEED: $1,100 \pm 50 \text{ min}^{-1}$ (rpm)



Remove the vacuum gauge and adaptors. Install and tighten the intake port vacuum joint screws.

