


INSPECTION

Remove the PAIR solenoid valve.

Check that the air should not flow (A) to (B), only when the 12V battery is connected to the PAIR solenoid valve terminals.

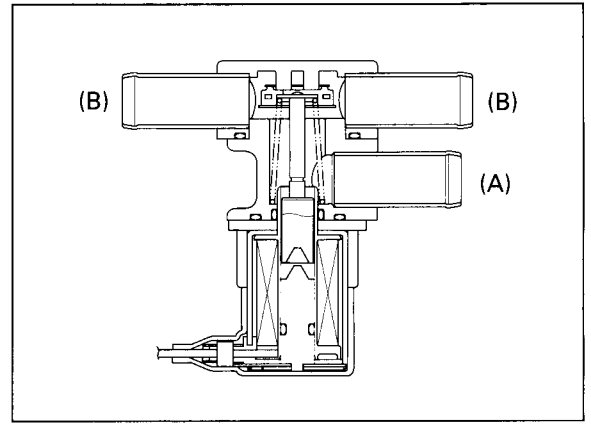

Check the resistance between the terminals of the PAIR solenoid valve.

STANDARD: 20 – 24 Ω (20 °C/68 °F)

If the resistance is out of specification, replace the PAIR solenoid valve.

