

Route the alternator wire into the frame, connect the alternator 3P (White) connector.



Connect the following connector:

- Ignition pulse generator 2P (Red) connector
- Speed sensor 3P (White) connector
- Side stand switch 3P (Green) connector
- Engine sub-harness 3P (Black) connector

Install the following:

- Throttle body (page 5-63)
- Fuel tank (page 5-54)
- Lower cowl (page 2-4)

Adjust the drive chain slack (page 3-20).

Pour recommended engine oil up to the proper level (page 3-13).

Fill the cooling system with recommended coolant and bleed the air (page 6-4).

