## **CRANKCASE/PISTON/CYLINDER**

Measure the piston pin bore.

**SERVICE LIMIT:** 19.03 mm (0.749 in)



Measure the O.D. of the piston pin.

**SERVICE LIMIT:** 18.984 mm (0.7474 in)

Calculate the piston-to-piston pin clearance.


**STANDARD**: 0.002-0.014 mm (0.0001-0.0006 in)



## **CYLINDER INSPECTION**

Inspect the top of the cylinder for warpage.

**SERVICE LIMIT:** 0.05 mm (0.002 in)

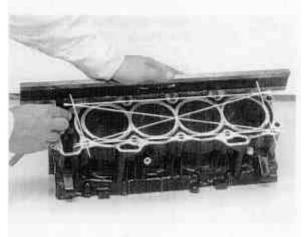

Inspect the cylinder bore for wear or damage. Measure the cylinder I.D. in  $\boldsymbol{X}$  and  $\boldsymbol{Y}$  axis at three levels.

Take the maximum reading to determine the cylinder wear.

**SERVICE LIMIT:** 79.10 mm (3.114 in)

Calculate the piston-to-cylinder clearance.

Take a maximum reading to determine the clearance.

Refer to page 11-5 for measurement of the piston O.D.

**STANDARD**: 0.010 - 0.045 mm (0.0004 - 0.0018 in)

