

Remove the stop ring from the fork pipe.

Loosen the left handlebar pinch bolt and remove the handlebar.



LEFT HANDLEBAR INSTALLATION

Install the left handlebar onto the fork pipe while aligning its boss with the groove of the top bridge. Make sure the handlebar is seated on the top bridge.



Tighten the left handlebar pinch bolt to the specified torque.

TORQUE: 26 N·m (2.7 kgf·m , 20 lbf·ft)



HANDLEBAR WEIGHT REPLACEMENT

Remove the grip from the handlebar. Straighten the weight retainer tab by the screwdriver or punch.

Temporarily install the grip end and screw, then remove the handlebar weight by turning the grip end.

Apply lubricant spray through the tab locking hole to the rubber for easy removal.

