


# REAR WHEEL/SUSPENSION

Remove the driven flange collar.

Drive out the driven flange bearing.

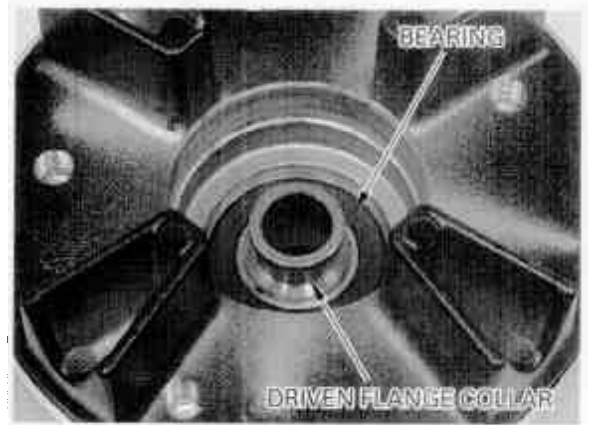


## Wheel bearing removal

Install the bearing remover head into the bearing. From the opposite side install the bearing remover shaft and drive the bearing out of the wheel hub. Remove the distance collar and drive out the other bearing.

### TOOLS:

Bearing remover head, 20 mm 07746-0050600

Bearing remover shaft 07746-0050100

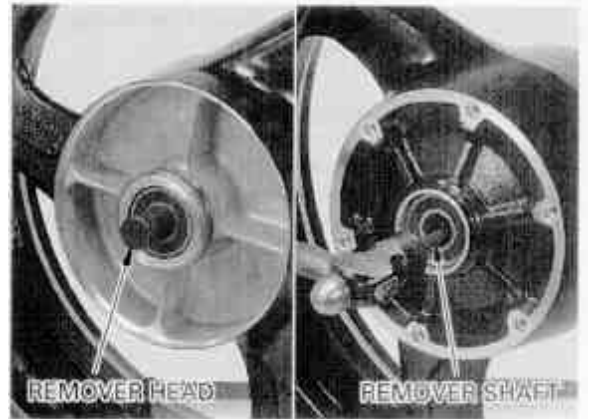

## ASSEMBLY

