

REAR WHEEL/SUSPENSION

Install the driven flange assembly into the left wheel hub.

If the driven sprocket was removed, install the driven sprocket and tighten the nuts.

TORQUE: 108 N·m (11.0 kgf·m , 80 lbf·ft)


Apply grease to the dust seal lips, then install it into the driven flange.



Install the brake disc with its rotating direction mark facing out.

Install and tighten the new bolts to the specified torque.


TORQUE: 42 N·m (4.3 kgf·m , 31 lbf·ft)

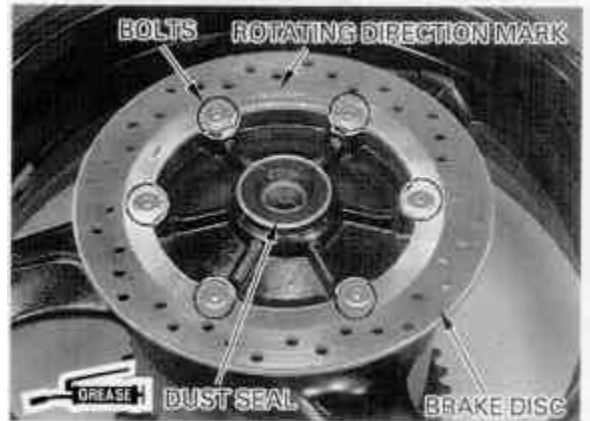

INSTALLATION

Apply grease to the side collar inside and grooves.

Install the side collars.

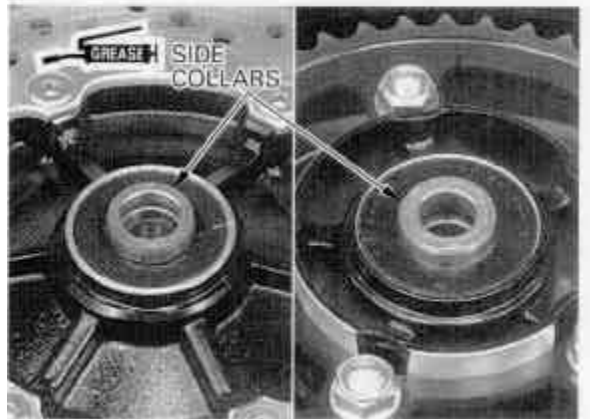

Install the rear brake caliper bracket onto the guide of the swingarm.

