

SWINGARM


REMOVAL

Remove the rear wheel (page 14-3).

Remove the socket bolts and drive chain case.



Remove the SH bolts and brake hose guides.

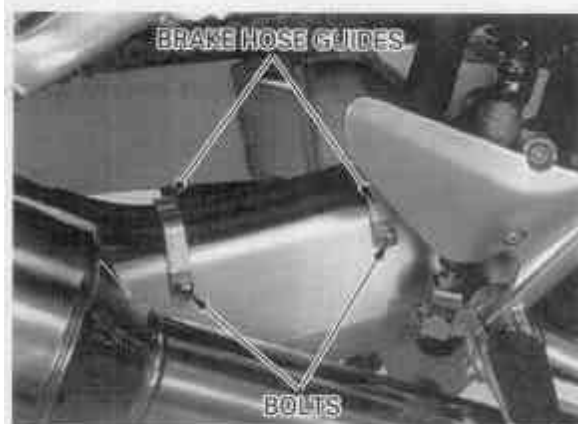

Remove the shock absorber lower mounting bolt/nut.
Remove the shock arm plate bolt/nut (swingarm side).



Remove the swingarm pivot nut.

