

STARTER MOTOR

REMOVAL

⚠ WARNING

With the ignition switch OFF, remove the negative cable at the battery before servicing the starter motor.

Support the front end of the fuel tank (page 3-5).
Drain the coolant (page 6-4).

Remove the two SH bolts and water joint.



Remove the nut and the starter motor cable from the starter motor.

CAUTION:

Be careful not to damage the water hose.

Remove the starter motor mounting bolts and ground wire.

Pull the starter motor out of the crankcase.

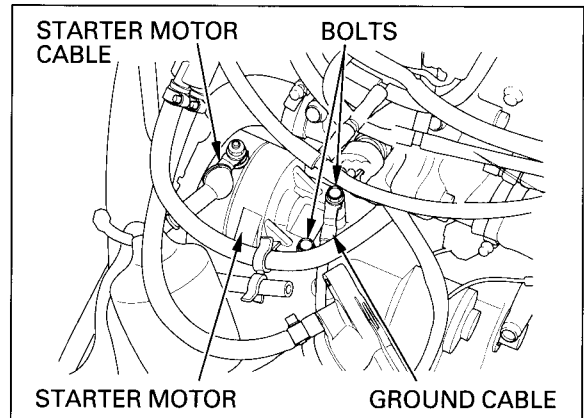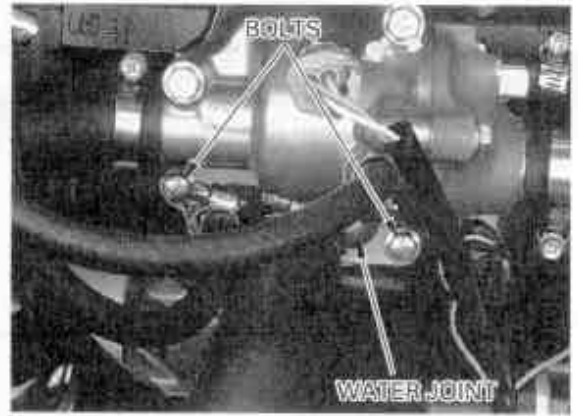

DISASSEMBLY

NOTE:

Record the location and number of shims.

Remove the following:
– Starter motor case bolts

- Rear cover assembly
- Seal ring
- Shims

