

To print chapters, click on the printer icon and fill in the page range.

1.	General Information	3 - 40
2	Frame/Body panels/Exhaust	41 - 67
3.	Maintenance	68 - 98
4.	Lubrication system	99 - 115
5.	Fuel system	116 - 199
6.	Cooling system	200 - 216
7.	Engine removal/Installation	217 - 228
8.	Cylinder head/Valves	229 - 260
9.	Clutch/Gearshift linkage	261 - 288
10.	Alternator/Starter clutch	289 - 298
11.	Crankcase/ Piston/Cylinder	299 - 312
12.	Crankshaft/ Transmission	313 - 336
13.	Front wheel/Suspension/Steering	337 - 371
14.	Rear wheel/Suspension	372 - 393
15.	Hydraulic brake	394 - 435
16.	Battery/Charging system	436 - 444
17.	Ignition system	445 - 456
18.	Electric Starter	458 - 468
19.	Lights/Meters/Switches	469 - 493
20.	Immobilizer System	494 - 506
21.	Wiring diagram	507
22.	Technical features	508 - 511
23.	Troubleshooting	512 - 515
	Index	516 - 517

Note: Make sure to select Shrink to fit in the printer dialog box when printing wiring diagrams.