

HEADLIGHT AIM


▲WARNING

An improperly adjusted headlight may blind oncoming drivers, or it may fail to light the road for a safe distance.

NOTE:

Adjust headlight beam as specified by local laws and regulations.

Adjust vertically by turning the vertical adjusting screw.
Adjust horizontally by turning the horizontal adjusting screw.

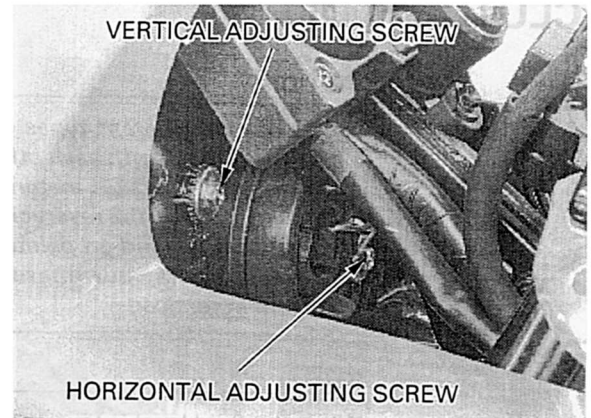


CLUTCH SYSTEM

Operate the clutch lever and check that no air has entered the system.
If the clutch is not disengaged properly, or the lever feels soft or spongy, bleed the air from the system.

Refer to page 9-4 for air bleeding procedures.

Inspect the clutch hoses, pipe and fittings for damage, deterioration, cracks or signs of leakage.
Tighten any loose fittings.
Replace hoses, pipe and fittings as required.

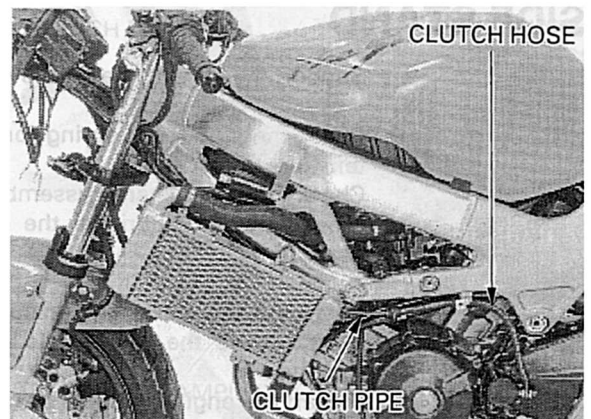

CLUTCH LEVER ADJUSTMENT

The distance between the tip of the clutch lever and the grip can be adjusted by turning the adjuster.

CAUTION:

Align the arrow on the clutch lever with the index mark on the adjuster.

