

REMOVAL


Drain the engine oil (page 3-10).

Remove the following:


- front fairing (page 2-3)
- engine under cover (page 2-4)

Remove the oil cooler pipe joint bolts and joints from the oil cooler.

Remove the mounting bolts and the oil cooler from the bracket.

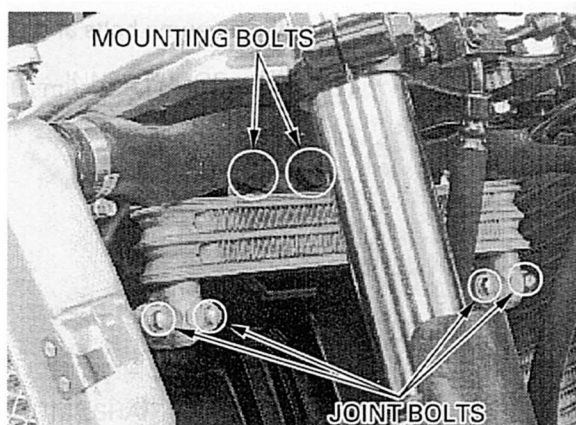

Remove the oil hose joint bolts and joints from the engine, then remove the oil hoses/pipes.

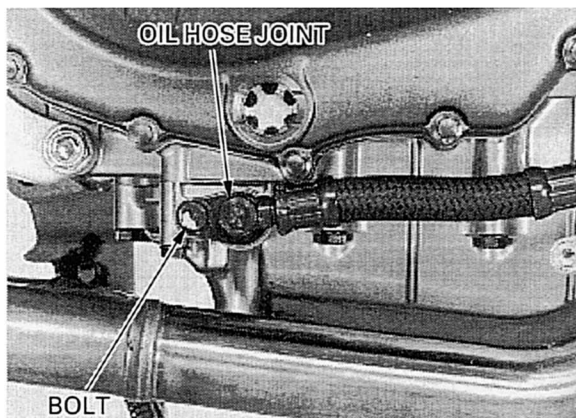

INSTALLATION

Install the oil hoses/pipes.

Coat new O-rings with oil and install them onto the oil hose joints.

Connect the oil hose joints to the engine and tighten the bolts.

Install the oil cooler onto the bracket and tighten the mounting bolts.

Coat new O-rings with oil and install them onto the oil pipe joints.

Connect the oil pipe joints to the oil cooler and tighten the bolts.



Install the removed parts in the reverse order of removal.

Fill the crankcase with recommended engine oil (page 3-10)

