

CARBURETOR REMOVAL

Drain the coolant (page 6-5).
Remove the air cleaner housing (page 5-4).

NOTE:

When the carburetors will not be serviced, remove the carburetor assembly with the air cleaner housing attached to prevent the threaded holes in the carburetor from damaging.

Disconnect the throttle sensor 3P (white) connector. ED, G type: Remove the throttle sensor wire from the clamp.

Loosen the carburetor insulator band bolts.

NOTE:

Insert the screwdriver through the hole in the heat guard to loosen the front carburetor insulator band bolt.

Remove the carburetor assembly from the insulators.

Remove the throttle cables from the cable stay and disconnect them from the throttle drum.

Disconnect the water inlet and outlet hoses from the carburetor heaters.

