



Install the right crankcase cover and tighten the thirteen bolts.

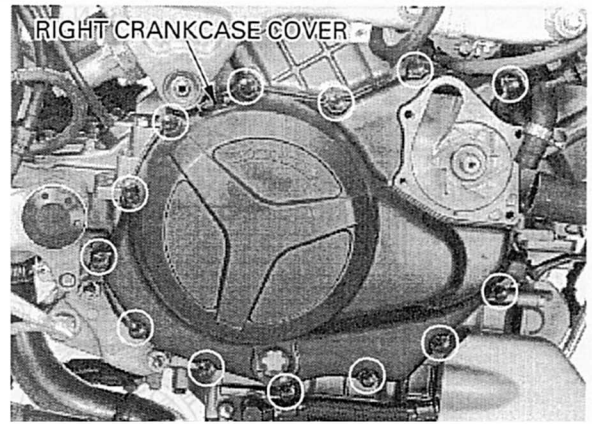


Route the ignition pulse generator wire properly (page 1-18).

Connect the ignition pulse generator connector.

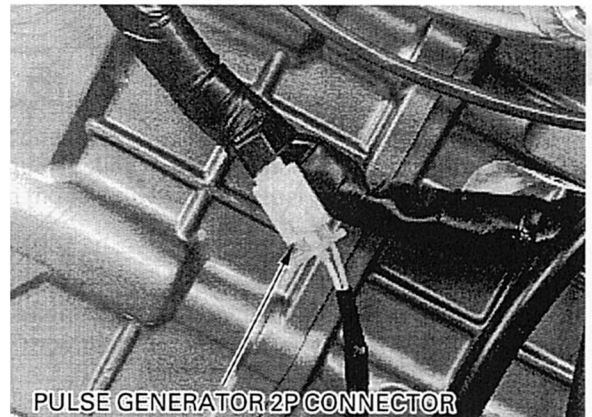

Install the dowel pins and a new O-ring into the water pump cover groove.

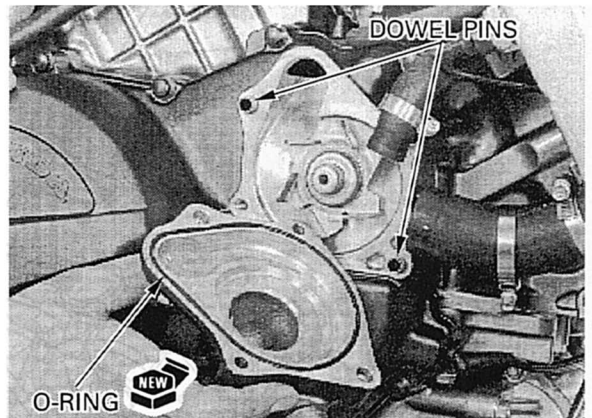

Connect the lower radiator hose to the water pump cover.

Install the water pump cover onto the right crankcase cover and tighten the four bolts.

Connect the carburetor heater water outlet hose and bypass hose to the water pump cover.

Fill and bleed the cooling system (page 6-5).

