TORQUE VALUES

Apply locking agent to the threads Apply oil to the threads and seating surface Apply oil to the threads and seating surface Apply locking agent to the threads Apply locking agent to the threads

TOOLS

Spark plug

07757-0010000 Valve spring compressor 07742-0010000 Valve guide remover 07743-0020000 Valve guide driver Valve quide reamer 07VMH-MBB0200 07780-0010500 Valve seat cutter, 40 mm (IN/EX 45°) Flat cutter, 38.5 mm (IN 32°) 07780-0012400 07780-0012300 Flat cutter, 35 mm (EX 32°) 07780-0014100 Interior cutter, 37.5 mm (IN/EX 60°) 07VMH-MBB0100 Cutter holder, 6 mm

TROUBLESHOOTING

Engine top-end problems usually affect engine performance. These can be diagnosed by a compression test, or by tracing top-end noise with a sounding rod or stethoscope.

14 N·m (1.4 kgf·m , 10 lbf·ft)

Compression too low, hard starting or poor performance at low speed

- Valves
 - -Incorrect valve adjustment
 - -Burned or bent valves
 - -Incorrect valve timing
 - -Broken valve spring
 - -Uneven valve seating
- Cylinder head
 - -Leaking or damaged cylinder head gasket
 - -Warped or cracked cylinder head
 - -Loose spark plug
- Cylinder/piston (section 12)

Compression too high

Excessive carbon build-up on piston head or combustion chamber

Excessive smoke

- Worn valve stem or valve guide
- Damaged stem seal
- Cylinder/piston problem (section 12)

Excessive noise

- Incorrect valve clearance
- Sticking valve or broken valve spring
- Worn or damaged camshaft
- Worn or damaged valve lifter
- Worn cam chain
- Worn or damaged cam chain tensioner
- Worn cam sprocket teeth
- Cylinder/piston problem (section 12)

Rough idle

• Low cylinder compression