14

14. REAR WHEEL/SUSPENTION

SERVICE INFORMATION	14-1	SHOCK ABSORBER	14-8
TROUBLESHOOTING	14-2	SUSPENSION LINKAGE	14-11
REAR WHEEL	14-3	SWINGARM	14-15

SERVICE INFORMATION

GENERAL

AWARNING

- Riding on damaged rims impairs safe operation of the vehicle.
- A contaminated brake disc or pad reduces stopping power. Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- The shock absorber contains nitrogen gas under high pressure. Do not allow fire or heat near the shock absorber.
- Before disposal of the shock absorber, release the nitrogen.
- The damper unit is filled with nitrogen gas under high pressure, do not try to disassemble.
- A hoist or equivalent is required to support the motorcycle when servicing the rear wheel and suspension.
- Use genuine Honda replacement bolts and nuts for all suspension pivots and mounting points.
- Refer to section 15 for brake system service.

SPECIFICATIONS

Unit: mm (in)

			O 11111 (1117)	
	ITEM	STANDARD	SERVICE LIMIT	
Minimum tire tread depth			2.0 (0.08)	
Cold tire pressure	Driver only	290 kPa (2.90 kgf/cm² , 42 psi)		
	Driver and passenger	290 kPa (2.90 kgf/cm², 42 psi)		
Axle runout			0.20 (0.008)	
Wheel rim runout	Radial		2.0 (0.08)	
	Axial		2.0 (0.08)	
Wheel balance weight			60 g (2.1 oz) max.	

TORQUE VALUES

Rear axle nut	93 N·m (9.5 kgf·m , 69 lbf·ft)	
Rear brake disc bolt	42 N·m (4.3 kgf·m , 31 lbf·ft)	ALOC bolt
Final driven sprocket bolt	108 N·m (11.0 kgf·m , 80 lbf·ft)	U-nut
Shock absorber upper mounting bolt	44 N·m (4.5 kgf·m , 33 lbf·ft)	ALOC bolt
Shock absorber lower mounting nut	44 N·m (4.5 kgf·m , 33 lbf·ft)	U-nut
Shock arm-to-swingarm nut	44 N·m (4.5 kgf·m , 33 lbf·ft)	U-nut
Shock arm-to-shock link nut	44 N·m (4.5 kgf·m , 33 lbf·ft)	U-nut
Shock link-to-bracket nut	44 N·m (4.5 kgf·m , 33 lbf·ft)	U-nut
Swingarm pivot nut	93 N·m (9.5 kgf·m , 69 lbf·ft)	U-nut
Drive chain slider bolt	9 N·m (0.9 kgf·m , 6.5 lbf·ft)	ALOC bolt
Rear brake hose clamp screw	4 N·m (0.43 kgf·m , 3.1 lbf·ft)	ALOC screw