

REAR MASTER CYLINDER/BRAKE PEDAL

CAUTION:

- *Avoid spilling fluid on painted, plastic or rubber parts. Place a rag over these parts whenever the system is serviced.*
- *When removing the oil bolt, cover the end of the hose to prevent contamination.*

DISASSEMBLY

Drain the brake fluid from the rear brake hydraulic system (page 15-3).

Disconnect the brake hose from the master cylinder by removing the oil bolt and sealing washers. Loosen the master cylinder mounting bolts.

Support the motorcycle securely with a hoist or equivalent.

Remove the swingarm pivot caps.

Remove the lower muffler mounting bolt and washer.

Remove the swingarm pivot nut.

Remove the socket bolt, collar, swingarm pivot bolt and right driver footpeg bracket.

Remove the master cylinder mounting bolts.

Remove the snap ring, washer and brake pedal from the pedal pivot shaft.

Remove the cotter pin from the joint pin.

Remove the joint pin and master cylinder from the brake pedal.

Remove the snap ring and reservoir hose joint from the master cylinder.

Remove the O-ring.

