

Remove the two mounting bolts and the ignition coil.



Install the ignition coil and tighten the mounting bolts.

TORQUE: 10 N·m (1.0 kgf·m , 7 lbf·ft)

Install the removed parts in the reverse order of removal.

NOTE:

Route the ignition coil wire and spark plug wire properly (page 1-18).

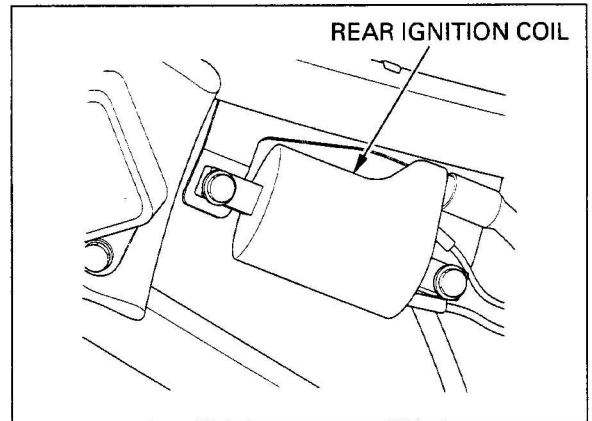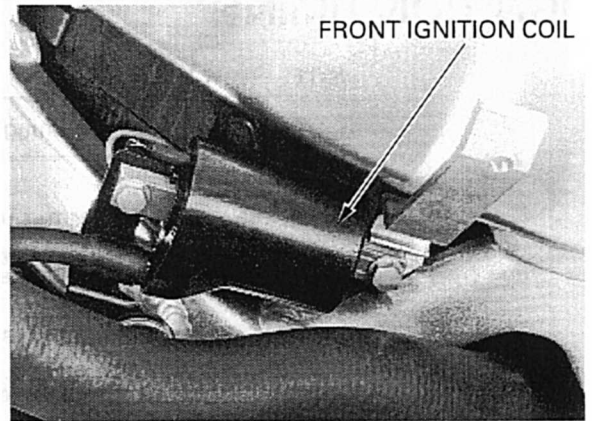

IGNITION PULSE GENERATOR REPLACEMENT

Remove the right crankcase cover (page 6-12).

Remove the two bolts and ignition pulse generator.

Apply sealant to the grommet seating surfaces. Install a new ignition pulse generator and the grommet into the cover groove properly. Tighten the bolts.

TORQUE: 12 N·m (1.2 kgf·m , 9 lbf·ft)

Install the right crankcase cover (page 6-14).

