



ELECTRIC STARTER


Check for continuity between pairs of commutator bars.
There should be continuity.

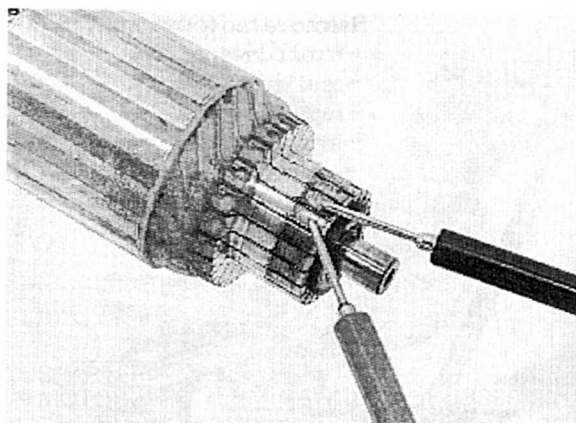

Check for continuity between each commutator bar and the armature shaft.
There should be no continuity.

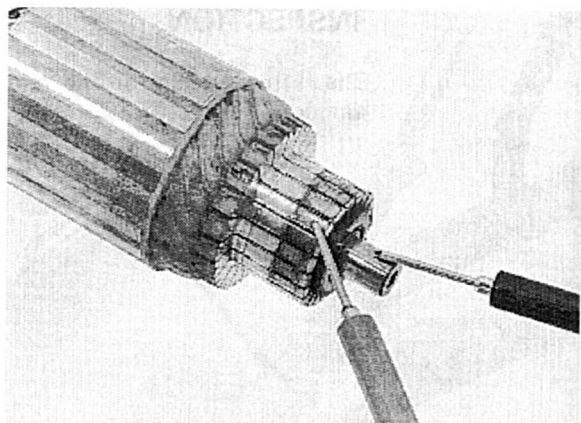

Check for continuity between the insulated brush and cable terminal.
There should be continuity.

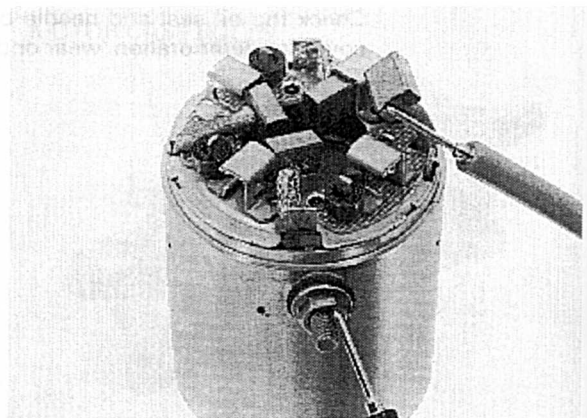

Check for continuity between the insulated brush and motor case.
There should be no continuity.

