


REMOVAL/INSTALLATION

Remove the seat cowl (page 2-2).

Remove the two screws and the brake/taillight.


Install the brake/taillight in the reverse order of removal.

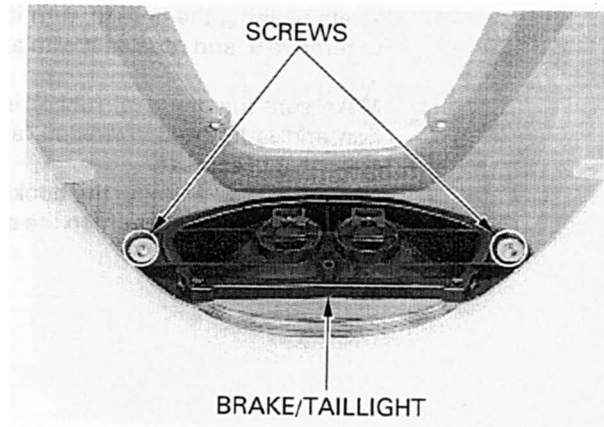

INSTRUMENTS


BULB REPLACEMENT

Remove the three bolts and the instrument assembly from the stay.

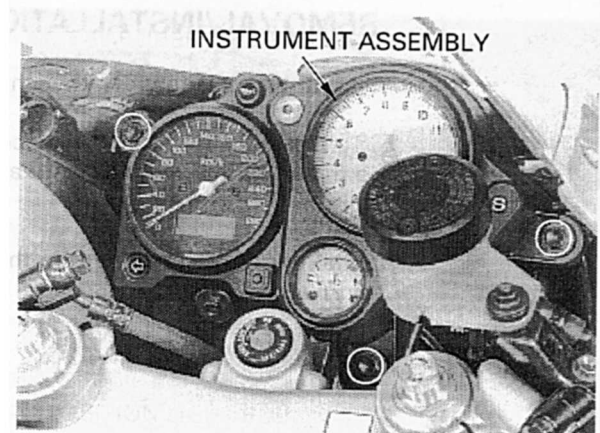

Pull the socket out of the instrument case. Pull the bulb out of the socket and replace it with a new one.

Install the socket into the instrument case. Install the instrument assembly onto the stay and tighten the three bolts.

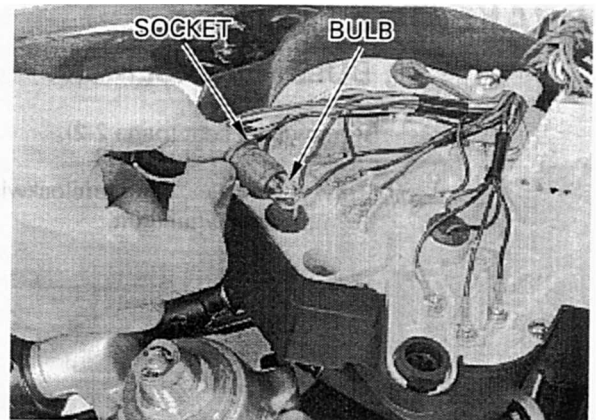

REMOVAL/INSTALLATION

Remove the three bolts and the instrument assembly from the stay (see above).

Disconnect the instrument 6P (black) and 9P (black) connectors.

Install the instrument assembly in the reverse order of removal.

