


VTR1000F-V (U)

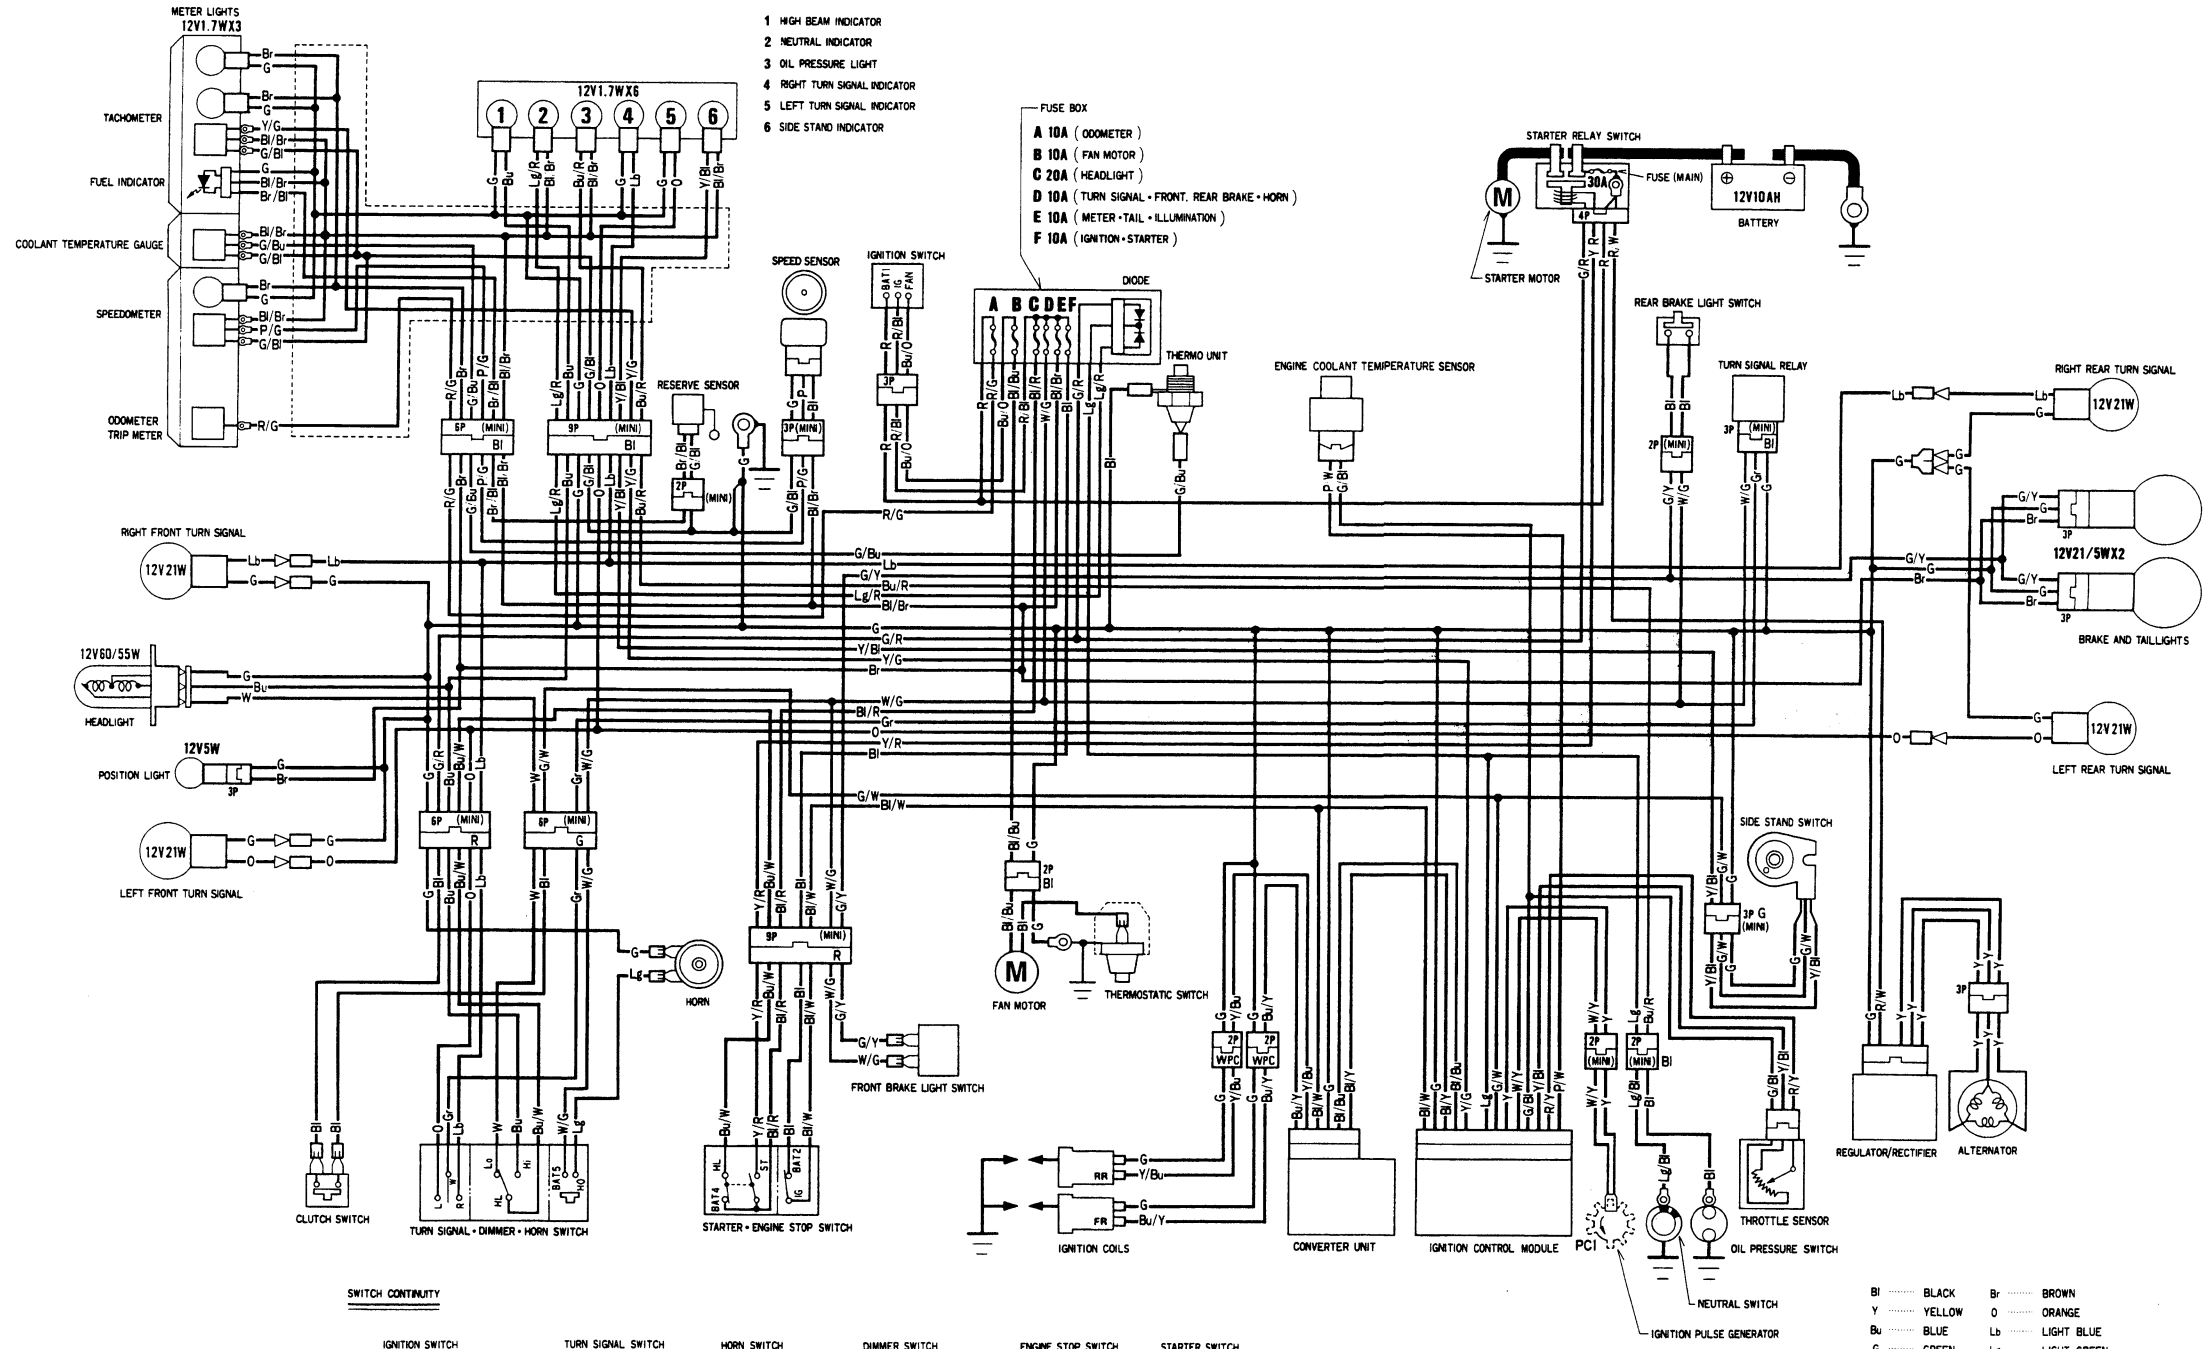

- 1 HIGH BEAM INDICATOR
- 2 NEUTRAL INDICATOR
- 3 OIL PRESSURE LIGHT
- 4 RIGHT TURN SIGNAL INDICATOR
- 5 LEFT TURN SIGNAL INDICATOR
- 6 SIDE STAND INDICATOR

- FUSE BOX
- A 10A (ODOMETER)
 - B 10A (FAN MOTOR)
 - C 20A (HEADLIGHT)
 - D 10A (TURN SIGNAL - FRONT, REAR BRAKE - HORN)
 - E 10A (METER - TAIL - ILLUMINATION)
 - F 10A (IGNITION - STARTER)

SWITCH CONTINUITY

IGNITION SWITCH			TURN SIGNAL SWITCH			HORN SWITCH		DIMMER SWITCH			ENGINE STOP SWITCH		STARTER SWITCH		
ON	BATI	IG	R	W	R	FREE	HO	Lo	HL	Lo	OFF	IG	BAT2	FREE	ST
OFF		FAN	N		L	PUSH	BATS	(N)		Hi	RUN				BAT4
LOCK			L					Hi							HL

- Bl BLACK
- Y YELLOW
- Bu BLUE
- G GREEN
- R RED
- W WHITE
- Br BROWN
- O ORANGE
- Lb LIGHT BLUE
- Lg LIGHT GREEN
- P PINK
- Gr GRAY

0030Z-MBB-6500