

AIR CLEANER .....	3-5	ENGINE OIL FILTER .....	3-11
AIR CLEANER HOUSING (FUEL SYSTEM) .....	5-4	ENGINE REMOVAL .....	7-3
ALTERNATOR CHARGING COIL .....	16-8	ENGINE UNDER COVER .....	2-4
ALTERNATOR STATOR .....	10-2	EXHAUST SYSTEM .....	2-5
BATTERY .....	16-5	FLYWHEEL INSTALLATION .....	10-7
BRAKE FLUID .....	3-18	FLYWHEEL REMOVAL .....	10-3
BRAKE FLUID REPLACEMENT/AIR BLEEDING .....	15-3	FORK .....	13-12
BRAKE LIGHT SWITCH .....	3-20	FRONT BRAKE CALIPER .....	15-16
BRAKE LIGHT SWITCH .....	19-15	FRONT FAIRING .....	2-3
BRAKE PAD WEAR .....	3-19	FRONT MASTER CYLINDER .....	15-7
BRAKE PAD/DISC .....	15-5	FRONT WHEEL .....	13-6
BRAKE SYSTEM .....	3-20	FUEL LINE .....	3-4
BRAKE/TAILLIGHT .....	19-5	FUEL TANK .....	2-4
CABLE & HARNESS ROUTING .....	1-18	GEARSHIFT LINKAGE .....	9-20
CAMSHAFT INSTALLATION .....	8-19	GENERAL SAFETY .....	1-1
CAMSHAFT REMOVAL .....	8-4	HANDLEBAR .....	13-3
CARBURETOR ASSEMBLY .....	5-10	HANDLEBAR SWITCHES .....	19-14
CARBURETOR CHOKE .....	3-5	HEADLIGHT .....	19-3
CARBURETOR COMBINATION .....	5-13	HEADLIGHT AIM .....	3-21
CARBURETOR DISASSEMBLY/INSPECTION .....	5-7	HORN .....	19-18
CARBURETOR INSTALLATION .....	5-16	IGNITION COIL .....	17-6
CARBURETOR REMOVAL .....	5-5	IGNITION PULSE GENERATOR .....	17-7
CARBURETOR SEPARATION .....	5-6	IGNITION SWITCH .....	19-13
CARBURETOR SYNCHRONIZATION .....	3-12	IGNITION SYSTEM INSPECTION .....	17-4
CHARGING SYSTEM INSPECTION .....	16-6	IGNITION TIMING .....	17-7
CHOKE SYSTEM .....	5-17	INSTRUMENTS .....	19-6
CLUTCH .....	9-12	LOW FUEL INDICATOR/FUEL RESERVE SENSOR .....	19-17
CLUTCH DIODE .....	18-11	LUBRICATION & SEAL POINTS .....	1-16
CLUTCH FLUID .....	3-22	MAIN JOURNAL BEARING .....	12-4
CLUTCH FLUID REPLACEMENT/AIR BLEEDING .....	9-4	MAINTENANCE SCHEDULE .....	3-3
CLUTCH MASTER CYLINDER .....	9-5	MODEL IDENTIFICATION .....	1-3
CLUTCH SLAVE CYLINDER .....	9-10	NEUTRAL SWITCH .....	19-16
CLUTCH SWITCH .....	19-16	NUTS, BOLTS, FASTENERS .....	3-24
CLUTCH SYSTEM .....	3-21	OIL COOLER .....	4-11
COOLANT REPLACEMENT .....	6-4	OIL PRESSURE CHECK .....	4-4
COOLANT TEMPERATURE GAUGE/ THERMOSENSOR .....	19-10	OIL PRESSURE INDICATOR .....	19-13
COOLING FAN MOTOR SWITCH .....	19-12	OIL PUMP .....	4-7
COOLING SYSTEM .....	3-13	OIL STRAINER/PRESSURE RELIEF VALVE .....	4-5
CRANKCASE ASSEMBLY .....	11-10	PILOT SCREW ADJUSTMENT .....	5-18
CRANKCASE SEPARATION .....	11-3	PISTON/CYLINDER .....	12-8
CRANKPIN BEARING .....	12-6	POOR HANDLING .....	21-4
CRANKSHAFT .....	12-3	POOR PERFORMANCE AT HIGH SPEED .....	21-4
CYLINDER COMPRESSION .....	8-3	POOR PERFORMANCE AT LOW AND IDLE SPEED .....	21-3
CYLINDER HEAD ASSEMBLY .....	8-16	POSITION LIGHT (Except U type) .....	19-4
CYLINDER HEAD COVER INSTALLATION .....	8-23	PRIMARY DRIVE GEAR .....	9-22
CYLINDER HEAD COVER REMOVAL .....	8-3	RADIATOR COOLANT .....	3-13
CYLINDER HEAD DISASSEMBLY .....	8-8	RADIATOR RESERVE TANK .....	6-9
CYLINDER HEAD INSTALLATION .....	8-17	RADIATOR/COOLING FAN .....	6-6
CYLINDER HEAD REMOVAL .....	8-7	REAR BRAKE CALIPER .....	15-19
DRIVE CHAIN .....	3-14	REAR MASTER CYLINDER/BRAKE PEDAL .....	15-12
DRIVE CHAIN SLIDER .....	3-18	REAR WHEEL .....	14-3
EMISSION CONTROL SYSTEMS .....	1-25	REGULATOR/RECTIFIER .....	16-8
ENGINE COOLANT TEMPERATURE (ECT) SENSOR .....	17-10	SEAT .....	2-2
ENGINE DOES NOT START OR IS HARD TO START .....	21-1	SEAT COWL .....	2-2
ENGINE IDLE SPEED .....	3-13	SECONDARY AIR SUPPLY SYSTEM .....	3-14
ENGINE INSTALLATION .....	7-7	SECONDARY AIR SUPPLY SYSTEM (SW, AR, IIG type only) .....	5-19
ENGINE LACKS POWER .....	21-2	SERVICE INFORMATION	
ENGINE OIL .....	3-10	ALTERNATOR/STARTER CLUTCH .....	10-1
		BATTERY/CHARGING SYSTEM .....	16-1
		CLUTCH/GEARSHIFT LINKAGE .....	9-2