

SUSPENSION


Each shock absorber (1) has 5 adjustment positions for different load or riding conditions.

Use the handle lever (2) to adjust the rear shocks.

Position 1 is for light loads and smooth road conditions. Positions 2 to 5 increase spring preload for a stiffer rear suspension, and can be used when the motorcycle is heavily loaded. Be certain to adjust both shock absorbers to the same position.

Standard position : 1 (UB, NZ type)

Standard position : 2 (UY type)

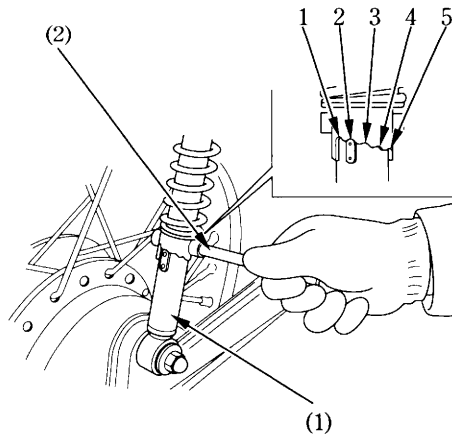

(1) Shock absorber

(2) Handle lever