


Ignition Timing Adjustment

Do not perform this operation until point gap has been adjusted.


1. Rotate the generator rotor counterclockwise until the F mark (1) aligns with the index mark (2). Ignition timing is correct if the contact breaker points (3) just begin to open at this moment.

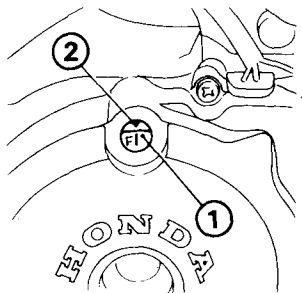

(1) F mark

(2) Index mark

2. If ignition timing is incorrect, loosen the base plate locking screws (4) and move the base plate (5). Moving the plate clockwise will advance the timing.
3. Retighten the base plate locking screws and recheck ignition timing.

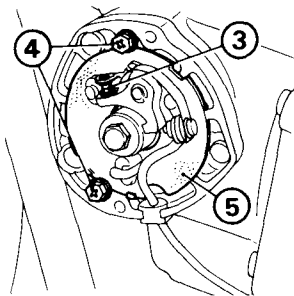

(3) Contact breaker points

(4) Base plate locking screws

(5) Base plate