

## Ignition Switch


The ignition switch is located directly below the indicator panel.

**OFF:** All electric circuits open. Engine cannot be started. Remove the key when the ignition switch is OFF.

**ON:** All electric circuits close. Engine and lights can be operated. Key cannot be removed.

**P (Parking):** All electric circuits open except for taillight and position light. Remove the key when parking.

**LOCK (Steering lock):** See page 76 (IT, F, U, SA, D)

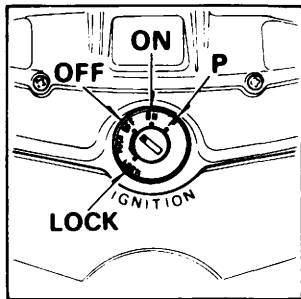

---

## Interruptor del encendido

El interruptor del encendido está situado directamente debajo del tablero de indicadores.

**OFF (Desconectado):** Todos los circuitos eléctricos están abiertos. No se puede poner el motor en marcha. Quite la llave de contacto cuando el interruptor de encendido esté en posición "OFF".

**ON (Connectado):** Todos los circuitos eléctricos están cerrados. El motor y las lámparas pueden funcionar. No se puede retirar la llave.

**P (Estacionamiento):** Todos los circuitos eléctricos están abiertos, excepto el de luz trasera y lámpara indicadora de posición. Quite la llave de contacto al estacionar.

**LOCK (Bloqueo del manubrio):** Vea pág 76 (IT, F, U, SA, D)