


## Cam Chain Adjustment

Make this adjustment when the engine is cold and not running.

1. Remove the A.C. generator cover.
2. Loosen the rear tensioner lock nut (1) 1/2 turn while turning the crankshaft clockwise from the rightside.  
This will automatically position itself to provide the correct tension.
3. Loosen the front tensioner lock nut (2) and tensioner bolt (3) 1/2 turn while turning the crankshaft. Tighten the bolt and nut.

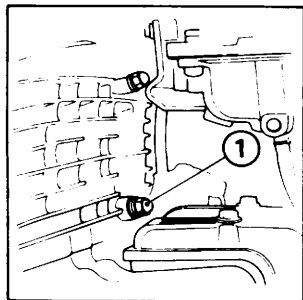

## Adjust de la cadena de levas

Lleve a cabo este ajuste cuando el motor esté frío y parado.

1. Desmonte la cubierta del generador de C.A.
2. Desatornille 1/2 vuelta la contratuerca (1) del tensionador trasero, mientras hace rotar el cigüeñal en el sentido de las manillas del reloj desde el lado derecho.  
El tensionador se posicionará automáticamente a si mismo para proveer la tensión correcta.
3. Afloje la contratuerca (2) y el perno (3) del tensionador delantero 1/2 vuelta mientras hace rotar el cigüeñal. Apriete el perno y la tuerca.

