


## Air Cleaner

1. Remove the seat. (See page 54)
2. Remove the air cleaner cover (2) by unscrewing the screws (1). Remove the element (3).
3. Wash the cleaner element (3) in clean solvent and allow to dry thoroughly.
4. Soak the air cleaner element in clean gear oil (SAE80-SAE90) until saturated, then squeeze out excess oil.
5. Replace the air cleaner and side cover.

**WARNING:** Gasoline or low flash point solvents are highly flammable and must not be used to clean the element.

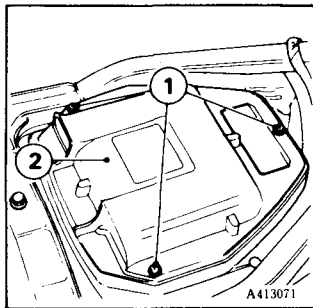

## Filtro de aire

1. Quite el asiento. (Vea pág. 54)
2. Quite la cubierta del filtro de aire (2) aflojando los tornillos (1). Quite el elemento (3).
3. Lave el elemento del filtro (3) en un solvente limpio y déjela secar completamente.
4. Ponga a remojar el elemento del filtro de aire en el aceite de engranaje (SAE80-SAE90) limpio hasta que sature. Luego, sáquele para purgar el exceso del aceite.
5. Remonte el filtro de aire y la cubierta lateral.

**ATENCION:** La gasolina y otros solventes de bajo punto de ignición son extremadamente inflamables y no deben utilizarse para lavar el elemento.

