


MAINTENANCE

Engine Oil

Check oil level at the start of each day the motorcycle is to be operated. Place the motorcycle on the center stand and check oil level. Oil level must be maintained between the upper (1) and lower (2) level marks on the oil filter cap dipstick (3). Add recommended oil (page 38) up to the upper level mark (1), if necessary. The oil should be changed and the oil filter replaced at the maintenance intervals shown on page 115.

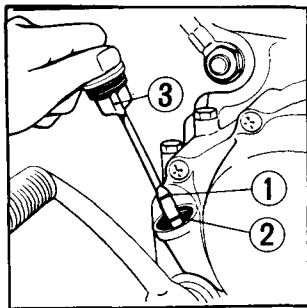

MANTENTIMIENTO

Aceite para motor

Revise el nivel de aceite antes de comenzar la marcha diaria de la motocicleta. Apoye la motocicleta en el soporte central y revise el nivel del aceite. El nivel de aceite debe mantenerse entre las marcas del nivel superior (1) y del inferior (2) colocadas en la varilla de medición del tapón de la boca de relleno de aceite (3).

Agregue el aceite recomendado (en la pág. 38) hasta el nivel de la marca superior (1), si es necesario. El aceite deberá cambiarse y el filtro de aceite reemplazarse con la frecuencia de servicios de mantenimiento indicada en la pag. 115.