

## Fuse Replacement


The fuse box is located behind the left side cover. The recommended fuses are 15A, and 7A.

When frequent failure of the fuse occurs, it usually indicates a short circuit or an overload in the electrical system. Consult your Honda dealer.

**WARNING:** Never use a fuse with a different rating from that specified on the fuse box and never use conductive material to replace a fuse.

(1) Fuse box

(2) Spare fuse

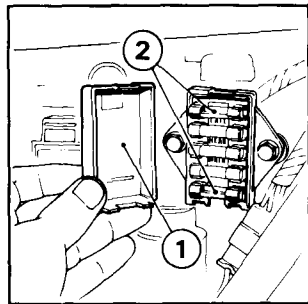

---

## Reemplazo de fusibles

La caja de fusibles está situada detrás de la cubierta lateral izquierda. Los fusibles recomendables son los de 15A y 7A.

Cuando se produzca quemadura frecuente de fusibles, esto indica una existencia de un corto circuito o sobrecarga en el sistema eléctrico. En tal caso, consulte con su agente HONDA.

**ATENCIÓN:** No utilice nunca un fusible que tenga un otro régimen que lo especificado en la caja de fusibles, y tampoco utilice un otro material conductor en lugar de un fusible.

(1) Caja de fusibles

(2) Fusibles de repuesto