


STARTING ENGINE

1. Turn the fuel valve to ON.
2. Insert the key in the main switch and turn to ON. The neutral indicator (green) should go on.
3. Make sure the emergency kill switch is in RUN.
4. Raise the choke lever ① to full closed position ②, if the engine is cold.
5. Open the throttle slightly and press the starter button.
6. Warm up the engine at approx. 1,500 rpm until it runs smoothly, with the choke open.

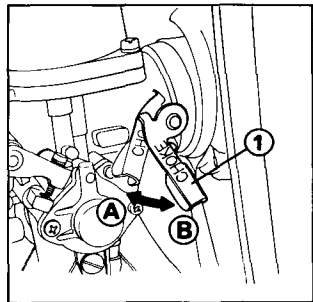

ARRANQUE DEL MOTOR

1. Colocar la palanca del grifo de combustible en posición ON.
2. Insertar la llave del interruptor general y colocarla en posición ON. Ver si se enciende la lámpara indicadora de neutro (verde).
3. Asegurarse de que el interruptor de parada de emergencia está colocado en posición RUN.
4. Levantar la palanca de estrangulador ① hacia la posición completamente cerrada ②, cuando el motor esté frío.
5. Girar levemente el puño de acelerador para abrirlo y oprimir el botón de arranque.
6. Calentar el motor haciéndolo marchar en vacío a 1.500 r.p.m., aprox., hasta que corre suavemente, con el estrangulador dejado abierto.